## CREALITY





Scan QR code to view detailed instruction

#### AUTO BED LEVELING SENSOR FOR 3D PRINTER

File download: https://www.creality.com/download/

Apply to 8-bit | 32-bit motherboards.

Adaptive model: Ender-5,Ender-5S,Ender-5 Pro,Ender-5

Ender-3S Ender-3Pro CR-10 CR-10Mini


#### SHENZHEN CREALITY 3D TECHNOLOGY CO.,LTD.


 ${\bf 11F\&Room\:1201,Block\:3,JinChengYuan,Tongsheng\:Community,} \\ {\bf Dalang,Longhua\:District,Shenzhen,China,518109}$ 


Official Website: www.creality.com


Tel: +86 755-8523 4565

E-mail: info@creality.com cs@creality.com

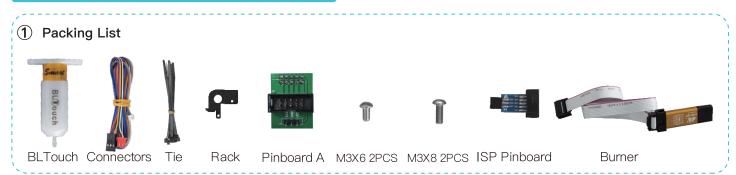


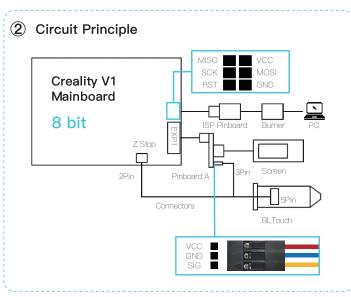

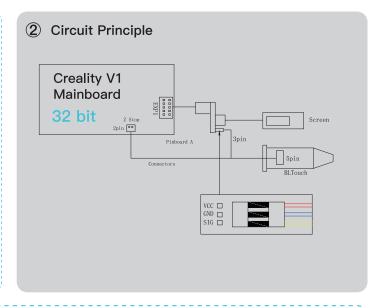

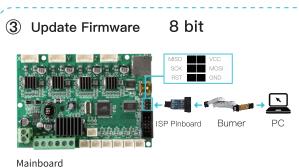


- 1. Connect ISP Pinboard and Burner.
- 2. Open the control box and find out the mainboard
- 3. Insert ISP pinboard into the mainboard 2X3 pins as the sign shows.
- 4. Insert the burner into computer USB port.

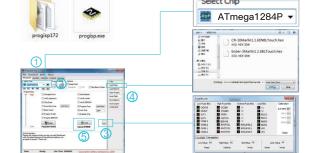

- 1. Open progisp.exe
- 2. Select Chip ATmega1284p.
- 3. Click ...  $\rightarrow$  Set Low Value=D6, HighValue=DC, ExtValue=FD $\rightarrow$ Click Write and close the window.
- 4、load Flash→Select .hex file.
- 5. Click Auto to update firmware, wait until it finishs, then close.
- 6. Unplug the ISP Pinboard from mainboard.



 3 Update Firmware 32 bit



Note: Every firmware files is different for every machine!

1. Double-click to open computer-right-click to format SD card.

2. Copy the firmware to the SD card. Note: the SD card only holds one firmware file.



3. Insert SD card.




4. Insert the power cord and press the switch.




5. Wait for the brush firmware to complete (about 10 seconds).


## 4 Install BLTouch

 

1、Insert connectors into 5 Pin Port.

 


 2. Install BLTocuh on the rack with 2 M3X6 screws




3. Loosen all fan cover screws, Install the farme on the corresponding position with 2 M3X8 screws

(5) Circuit Wiring 32 bit

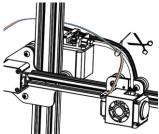

4. Secure the cable to the guide tube and cable with a cable tie and bypass the rear side of the gantry.

## 5 Circuit Wiring 8 bit

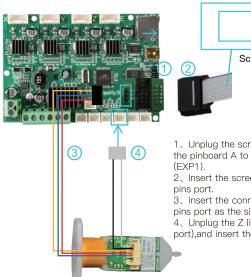


Screen

- 1. Unplug the screen cable, connect the pinboard A to the screen port
- 2. Insert the screen cable into 10
- 3, insert the connectors to the 3 pins port as the sign shows.
- 4. Unplug the Z limit switch(Z-stop port), and insert the connectors.

# Screen 1. Unplug the screen cable, connect the pinboard A to the screen port (EXP1). 2. Insert the screen cable into 10 pins port. 3, insert the connectors to the 3 pins port as the sign shows. 4. Unplug the Z limit switch(Z-stop port), and insert the connectors.

#### 6 Platform Adjustment 8 bit

 

 


Figure3

1. Prepare  $\rightarrow$  Auto home, and wait until it stops.





- 2. Prepare $\rightarrow$ Move axis $\rightarrow$ Move Z $\rightarrow$ Move 0.1mm $\rightarrow$ Rotate the knob until the distance between them is about 0.2mm (as a sheet of A4 paper), write down the value of A.
- 3. Rotate the knob until the distance between them is about 0.2mm (as a sheet of A4 paper), write down the value of A (For example, figure 3)



4. Control $\rightarrow$ Motion $\rightarrow$ Z Offset $\rightarrow$ write down the value of B, then rotate the knob until it comes out as: C=B+A. Return Control and Select Store settings.

 




2. Select control.



5. leveling 9 points




6.9 points leveling completed



7.automatic leveling is completed, the machine is ready to be OK

Note: Every machine has its own operation interface.

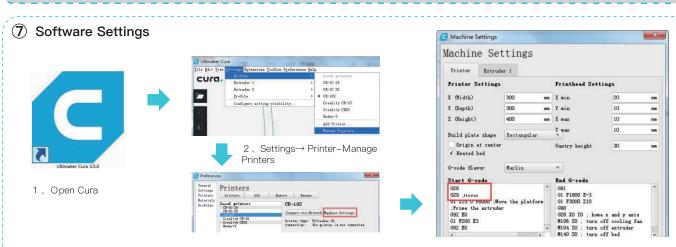

3 、Machine Settings

4、Change"G28"to"G28 G29"