

Develop Routine of TF03 in Arduino

In this routine, Arduino Uno and DUE board is taken as example, which is mainly for the user to quickly familiarize himself with our LiDAR and thus save the time of product development.

For detailed introduction and tutorial of Aruidno, please refer to following website: Arduino Official website: www.arduino.cc

Step 1: Hardware Connection

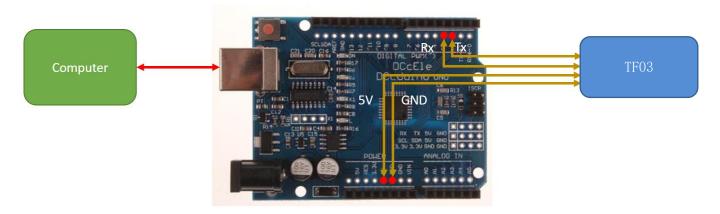


Figure 1 Schematic Diagram of Connection between TF03 and UNO Board

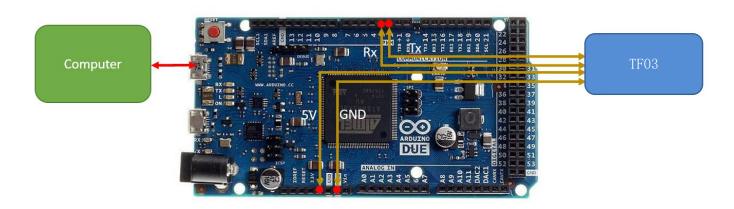


Figure 2 Schematic Diagram of Connection between TF03 and DUE Board



Step 2: Program Compilation

At least two serial ports of Arduino are required for the achievement of this routine function with one for receiving data of LiDAR and another for outputting data to PC for display. The user may either copy following code and paste it in Arduino IDE program editing window or directly open relevant enclosed file.

/*

This program is the interpretation routine of standard output protocol of TF03 product on Arduino.

For details, refer to Product Specifications.

For Arduino boards with only one serial port like UNO board, the function of software visual serial port is to be used.

*/

#include <SoftwareSerial.h> //header file of software serial port

SoftwareSerial Serial1(2,3); //define software serial port name as Serial1 and define pin2 as RX and pin3 as TX

/* For Arduinoboards with multiple serial ports like DUEboard, interpret above two pieces of code and directly use Serial1 serial port*/

int dist; //actual distance measurements of LiDAR

int check; //save check value

int i;

int uart[9]; //save data measured by LiDAR

const int HEADER=0x59; //frame header of data package

void setup() {

Serial.begin(9600); //set bit rate of serial port connecting Arduino with computer



```
Serial1.begin(115200); //set bit rate of serial port connecting LiDAR with Arduino
}
void loop() {
  if (Serial1.available()) { //check if serial port has data input
    if(Serial1.read() == HEADER) { //assess data package frame header 0x59
       uart[0]=HEADER;
       if (Serial1.read() == HEADER) { //assess data package frame header 0x59
         uart[1] = HEADER;
         for (i = 2; i < 9; i++) \{ //save data in array \}
           uart[i] = Serial1.read();
         }
         check = uart[0] + uart[1] + uart[2] + uart[3] + uart[4] + uart[5] + uart[6] + uart[7];
         if (uart[8] == (check & 0xff)){ //verify the received data as per protocol
           dist = uart[2] + uart[3] * 256; //calculate distance value
           Serial.print("dist = ");
           Serial.print(dist); //output measure distance value of LiDAR
           Serial.print('\t');
         }
      }
    }
  }
```



Step 3: Viewing of Data

Download the code into Arduino board and open the serial monitor for the serial port. Then real-time distance values as well as the corresponding strength and chip temperature can be viewed, as shown in figure 3.

⊚ COM3			
dist = 90	strength = 1341	Temprature = 34.00	celcius degre
dist = 91	strength = 1290	Temprature = 34.00	celcius degre
dist = 90	strength = 1281	Temprature = 34.00	celcius degre
dist = 90	strength = 1276	Temprature = 34.00	celcius degre
dist = 91	strength = 1268	Temprature = 34.00	celcius degre
dist = 86	strength = 4550	Temprature = 34.00	celcius degre
dist = 87	strength = 4619	Temprature = 34.00	celcius degre
dist = 83	strength = 4242	Temprature = 34.00	celcius degre
dist = 81	strength = 4164	Temprature = 34.00	celcius degre
dist = 80	strength = 4081	Temprature = 34.00	celcius degre
dist = 78	strength = 3988	Temprature = 34.75	celcius degre
dist = 74	strength = 3775	Temprature = 34.50	celcius degre
dist = 63	strength = 3012	Temprature = 35.00	celcius degre
dist = 58	strength = 2316	Temprature = 35.00	celcius degre
dist = 58	strength = 2621	Temprature = 35.00	celcius degre
dist = 58	strength = 2600	Temprature = 35.00	celcius degre
dist = 58	strength = 2524	Temprature = 35.00	celcius degre
dist = 58	strength = 2511	Temprature = 35.00	celcius degre
dist = 59	strength = 2807	Temprature = 35.00	celcius degre

Figure 3 Lidar data displayed on the monitor software by serial port

In addition, data curve can be viewed in the curve plotter for serial port, however, the above coding regarding the print of serial port should be modified:

```
//Serial.print("dist = ");
Serial.print(dist); //output measure distance value of LiDAR
Serial.print(" ");
```

Re-compile and download to Arduino board and open the curve plotter. Then two curves including the dist and strength can be viewed, as shown in Figure 4.



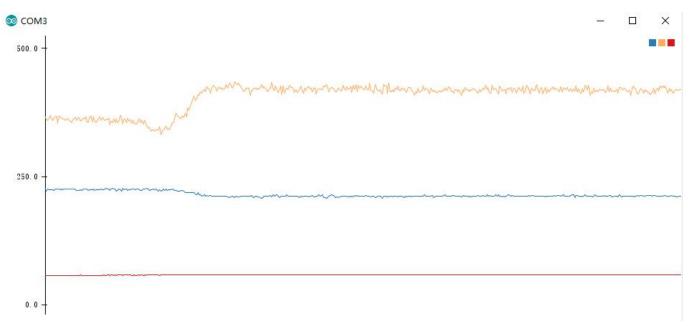


Figure 4 Plots of TF03 data on Curve plotter for Serial Port