

# Maker Uno

# **MAKER-UNO**



## User's Manual Rev 1.0 Dec 2017

Information contained in this publication regarding device applications and the like is intended throug suggestion only and may be superseded by updates. It is your responsibility to ensure that your applicatio meets with your specifications. No representation or warranty is given and no liability is assumed by Cytro Technologies Incorporated with respect to the accuracy or use of such information or infringement or patents or other intellectual property rights arising from such use or otherwise. Use of Cytror Technologies's products as critical components in life support system is not authorized except with express written approval by Cytron Technologies. No licenses are conveyed, implicitly or otherwise, under an intellectual property rights.

# **INDEX**


		PAGES
1.	INTRODUCTION	2
2.	PACKING LIST	4
3.	PRODUCT SPECIFICATIONS	5
4.	BOARD LAYOUT	6
5.	HARDWARE INSTALLATION	8
6.	GETTING STARTED	10
7.	EXTRA FEATURES	13
8.	WARRANTY	15


## **1. INTRODUCTION**

We bring you the Maker UNO, an Arduino UNO compatible board designed and developed specially for students to learn coding and microcontroller. We named it Maker UNO to encourage everyone to be a maker by getting started with this amazing board. By the way, it is in PURPLE!

3 years ago, we re-engineered Arduino UNO and introduce <u>CT-UNO</u>. It has been used in many projects development, among students, engineers, teachers, and makers. We have also been conducting training using CT-UNO for several years, and from the observations and feedback gathered; there are some features are under-utilized, yet there are some features which are needed for beginner. Working hand in hand with <u>ARUS</u> and <u>rero</u> team, we initiate the redesign of CT-UNO, making it more affordable, and more beginner friendly. It is Arduino UNO R3 compatible, and by that, Maker UNO can be programmed via Arduino IDE and compatible with all the example code and libraries for Arduino UNO.

"(We named it Maker (INO) to encourage everyone to be a maker by getting started with this amazing board!"

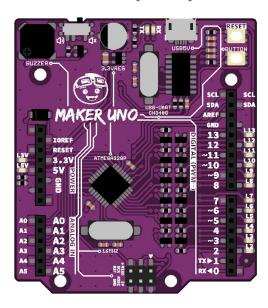

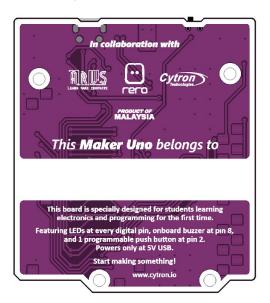

We have removed the DC jack (12V adapter input) and the 5V linear regulator as 90% of the beginner and projects use 5V from USB only. so the board can be offered at more affordable price. But don't get us wrong, Maker-UNO is not removing components, we actually design-in more components to help everyone to learn programming, coding and microcontroller. We added a piezo buzzer that will act as simple audio output, of course you can program it. Yet, to ensure the compatibility of Arduino UNO, we have also added a slide switch to disable this piezo buzzer and leave the IO as it is. Aside from the standard LED on pin 13, Maker-UNO comes with a programmable LED on every digital pin, from pin D0 to D13 :) That is a lot of LEDs. We believe LEDs provide very good visual/light digital output where the eyes can observe, while piezo buzzer offers sound feedback where the ears can hear. That is good enough for outputs, how about input? We reserve the reset button and added a programmable push button. How good is that? Now you can learn digital input, output, PWM (piezo buzzer and LED brightness) with just the Maker-UNO board.

Not to forget the change of FTDI chip to CH340 IC, the low cost yet stable USB to UART IC. Maker-UNO combines the simplicity of the UNO Optiboot bootloader (which load program faster), the stability of the CH340 and the R3 shield compatibility of the latest <u>Arduino UNO R3</u>.

Of course, we preserve the good feature of CT-UNO, the USB Micro B socket for program loading and to power the board. This enable everyone to utilize the USB cable of Android smart phone and power bank. Program can be loaded from your computer by utilizing your Android phone USB cable. Select "Arduino/Genuino UNO" for the "Board" in Arduino IDE and choose the correct COM port, you are ready to upload the code. If you do not have the <u>Micro-B USB cable</u>, please get it as it is sold separately.

Maker-UNO has all the amazing features Arduino UNO has to offer, 14 Digital I/O pins with 6 PWM pins, 6 Analog inputs, UART, SPI, external interrupts, not to forget the I<sup>2</sup>C too. The SDA, SCL and IOREF pins which being broken out on UNO R3 are on MAKER-UNO too. We has also populated the ISP header pins (SPI and power). With this, Maker-UNO will be compatible with all Arduino UNO shield.

Features:

- SMD ATmega328P microcontroller(the same microcontroller on Arduino UNO) with Optiboot (UNO) Bootloader.
- USB Programming facilitated by the CH340.
- Input voltage: USB 5V, from computer, power bank or standard USB adapter.
- 500mA (maximum) 3.3V voltage regulator.
- 0-5V outputs with 3.3V compatible inputs.
- 14 Digital I/O Pins (6 PWM outputs).
- 6 Analog Inputs.
- ISP 6-pin Header.
- 32k Flash Memory.
- 16MHz Clock Speed.
- R3 Shield Compatible.
- LED array for 5V, 3.3V, TX, RX and all digital pins.
- On board programmable push button (pin 2, need to configure as INPUT\_PULLUP).
- On board piezo buzzer (pin 8).
- Utilize USB Micro-B socket.
- PURPLE PCB!

# Maker Uno Comparison Table




FEATURES	Arduino Uno R3	CT UNO	Maker UNO	
Microcontroller	ATmega328P	ATmega328P	ATmega328P	
Operating Voltage	5V	5V	5V	
Input Voltage (recommended)	7 - 12V (Adapter)	7 - 12V (Adapter)	5∨ (USB only)	
Input Voltage (limit)	6 - 20V (Adapter)	6 - 20V (Adapter)	5V (USB only)	
Digital I/O Pins	20	20	20	
РШМ	6	6	6	
Analog Input	6 (10-bit)	6 (10-bit)	6 (10-bit)	
UART	1	1	1	
SPI	1	1	1	
12C	1	1	1	
External Interrupt	2	2	2	
DC Current for 5V	1A	1A	USB Source	
DC Current for 3.3V	50 mA	500 mA	500 mA	
DC Current per I/O Pin	20 mA	20 mA	20 mA	
Flash Memory	32 KB	32 KB	32 KB	
SRAM	2 KB	2 KB	2 KB	
EEPROM/Data Flash 1 KB		1 KB	1 KB	
Clock Speed	16 MHz	16 MHz	16 MHz	
USB to Serial Chip	ATmega16U2	FT231X	CH340G	
Programming IDE	ogramming IDE         Arduino IDE         Arduino IDE		Arduino IDE	
Extra Features	<ul> <li>Programmable LED at pin 13</li> </ul>	<ul> <li>Programmable LED at pin 13</li> <li>Extra GPIO pads with standard pitch</li> </ul>	<ul> <li>Programmable indicator LED at every digital pins (pin 2 to pin 13)</li> <li>Programmable push button at pin 2</li> <li>Piezo buzzer at pin 8 with selector switch</li> </ul>	
Price	RM 96.00 (~USD 25.00)	RM 58.80 (~USD 15.00)	RM 26.50 (~USD 6.50)	

Created by Cytron Technologies Sdn Bhd – All Rights Reserved

## **2. PACKING LIST**


Please check the parts and components according to the packing list. If there are any parts missing, please contact us at <u>sales@cytron.io</u> immediately.

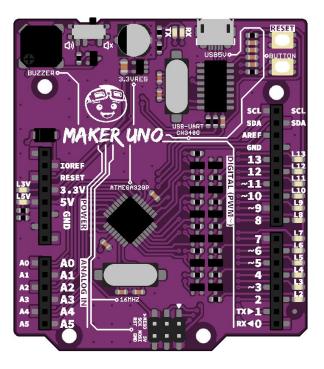

No	ITEMS	QUANTITY
1	Maker Uno (Code: MAKER-UNO)	1

## **3. PRODUCT SPECIFICATIONS**


#### Dimension:

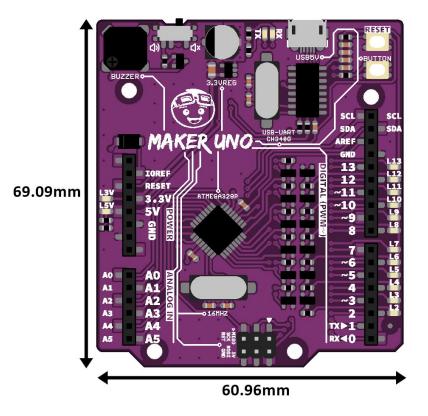

Absolute Maximum Rating of Maker Uno:

No	PARAMETERS	Min	Тур	Max	Unit
1	Input Voltage via USB connector	4.8	-	5.2	V
2	DC Current for 3.3V Pin (Max Continuous)	_	-	500	mA
3	DC Current per I/O Pin (Max)	_	-	20	mA

## **4. BOARD LAYOUT**

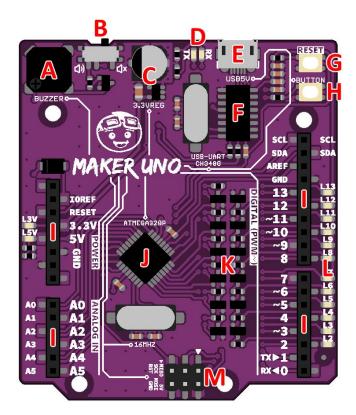

LABEL	FUNCTION
Α	ON BOARD PIEZO BUZZER Piezo buzzer is connected to pin 8 through slide switch (labeled B).
В	PIEZO BUZZER SLIDE SWITCH Slide switch to connect between pin 8 to piezo buzzer (labeled A). To use piezo buzzer, slide the switch on and program the buzzer. To use pin 8 for other purpose, slide the switch off.
С	VOLTAGE REGULATOR 3.3V Voltage regulator 3.3V used to regulate 5V USB to 3.3V and connected to pin 3.3V (labeled I).
D	LED INDICATOR FOR USB-SERIAL Indicates USB-Serial data for uploading process or debug purpose (Serial Monitor).
Е	USB MICRO B CONNECTOR Main supply for Maker Uno. Used for program and debug purpose (Serial Monitor) too.
F	USB-SERIAL IC CONVERTER (CH340G) Converts USB data to serial data. Used for program and debug purpose (Serial Monitor).
G	RESET BUTTON Button to restart Maker UNO program.
н	PROGRAMMABLE BUTTON This button is connected to pin 2 and GND. To use it, user need to configure it as INPUT_PULLUP.
I	ARDUINO UNO R3 STANDARD FEMALE PIN HEADER Maker UNO female header pin follows Arduino UNO R3 standard. The only difference is, Maker UNO does not have Vin.

J	MAIN MICROCONTROLLER (ATMEGA328P) Main controller for Maker Uno is ATmega328P, same as Arduino Uno R3.
K	SERIES OF MOSFET These series of MOSFET is a 'secret' why you can control LED or make it as indicator for input, even for pull-up input.
L	SERIES OF LED FOR DIGITAL I/O Every digital IO is equipped with LED, where you can control it or make it as indicator for input.
Μ	ARDUINO UNO STANDARD ISP PIN HEADER These are 2x3 header pins, standard for loading program via AVR programmer. Some uses it for SPI communication too.

## **5. HARDWARE INSTALLATION**

### **5.1 Maker Uno Power Supply**

Main power for Maker-UNO is through USB connection.



If you would like to make your Maker-UNO portable, you can use power bank or <u>Cytron LiPo</u> <u>Power Shield</u>.



NOTE

It is advisable to have 1 power source only at 1 time.

#### **5.2 Using Arduino Uno Shield**

Since Maker-UNO doesn't have Vin, any Arduino shield that require Vin is not compatible. However, if the shield have option to choose power source (either Vin or external voltage), it can be used with Maker Uno (by using external voltage). For example:

- Cytron 3A Motor Driver Shield
- Cytron G15 Shield
- Cytron 10A Motor Driver Shield
- Etc...

The rest, it is fully compatible with Maker Uno. For example:

- LCD keypad Shield
- Cytron XBee Shield
- Cytron SKM53 GPS Shield
- Etc...

So which Arduino shield is not compatible with Maker Uno? Below is the example of shield that need Vin and it don't have option to select power source.

- GPRS Shield V3.0
- Etc...

#### NOTE

#### How do I know either the shield is working with my Maker Uno?

You can refer to the product's schematic (Arduino shield) and check for the Vin connection. For further questions, please visit to our technical forum for similar question or post your question there.

## **6. GETTING STARTED**

#### **6.1 Preparing Hardware**

To get started, you must have:

- Maker-UNO board.
- USB Micro B Cable.
- Laptop/PC.

Please connect as follows to your laptop/PC.



#### **6.2 Install Arduino IDE**

Download the latest Arduino IDE at www.arduino.cc/en/Main/Software. Please choose appropriate installer depends on your laptop or computer OS(Operating System, Windows, Mac OS or Linux). Complete the download, proceed with the installation as usual.



#### ARDUINO 1.8.5

The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. It runs on Windows, Mac OS X, and Linux. The environment is written in Java and based on Processing and other opensource software. This software can be used with any Arduino board.

Refer to the Getting Started page for Installation instructions. Windows Installer Windows ZIP file for non admin install

Windows app Get

Mac OS X 10.7 Lion or newer

Linux 32 bits Linux 64 bits Linux ARM


Release Notes Source Code Checksums (sha512)

#### **6.3 Install Maker Uno Driver**

Download Maker-UNO driver at Maker Uno product page (under Attachment tab). Please choose appropriate driver depends on your OS. Complete the download, proceed with the installation as usual.

DESCRIPTION	ATTACHMENT	LOWEST PRICES	REVIE	WS (0)
Q & A (2)				
Description		Date Added	Size	Action
CH341 Driver (W	/indows 10)	15/12/2017	N/A	Download
CH341 Driver (N	lac OS Sierra)	15/12/2017	N/A	Download
Maker UNO Sch	ematic	15/12/2017	N/A	Download
Maker UNO Fritz	ting File	15/12/2017	N/A	Download
Maker UNO PCB	Eagle File	15/12/2017	N/A	Download
Arduino IDE		15/12/2017	N/A	Download

After installation is complete, your Maker-UNO port should appears at Device Manager under Ports (COM & LPT) - e.g. USB-SERIAL CH340 (COM3). Please remember the port number.

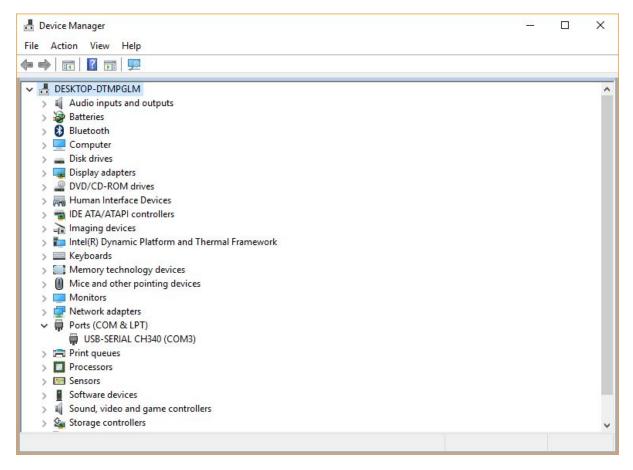

Created by Cytron Technologies Sdn Bhd - All Rights Reserved

### 6.4 Try Blink Example

Open Arduino IDE, select Board: "Arduino/Genuino Uno" and your Maker-UNO Port number (e.g. COM3). Try Blink example (File - Examples - 01.Basic - Blink). Click Upload icon to upload Arduino code to Maker Uno.

🥺 sketch_dec20a	Arduino 1.8.5	<u> </u>	o x
File Edit Sketch	ools Help		
00 61	Auto Format	Ctrl+T	Ø
sketch_dec20	Archive Sketch Fix Encoding & Reload		
1⊡ void setu	Serial Monitor	Ctrl+Shift+M	^
2 // put 3	Serial Plotter	Ctrl+Shift+L	
2 // put 3 4 } 5	WiFi101 Firmware Upda	ster	
6⊡ void loop 7 // put	Board: "Arduino/Genui	no Uno"	
8	Port	3	Serial ports
9 }	Get Board Info		COM3
	Programmer: "Arduino Burn Bootloader	as ISP" >	


### MAKER UNO ONLINE TRAINING

For more detail you can refer to Maker Uno Online Training at Cytron Youtube channel. MAKER UNO ONLINE TRAINING (YOUTUBE)


## **7. EXTRA FEATURES**

Maker-UNO incorporates 3 extra features which make it interesting and more suitable for beginner. Below are the detailed descriptions for each feature.


7.1 LEDs at Every Digital Pins

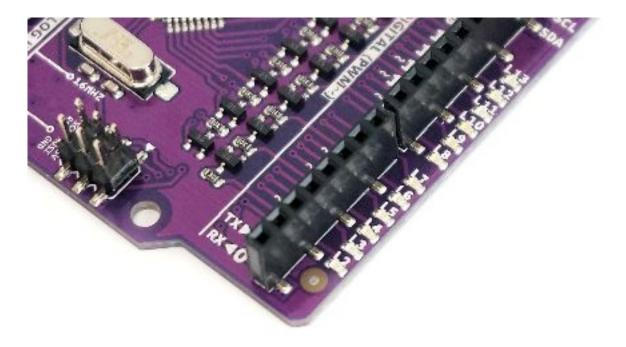

7.2 Programmable Push Button

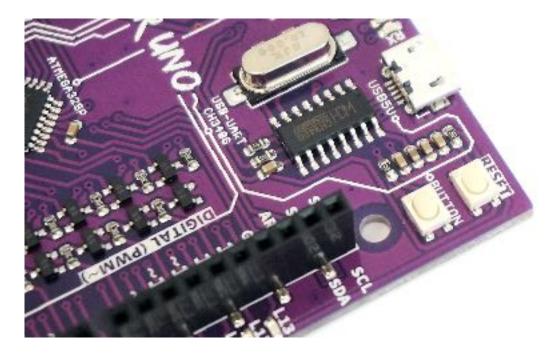

### 7.3 On-board Piezo Buzzer

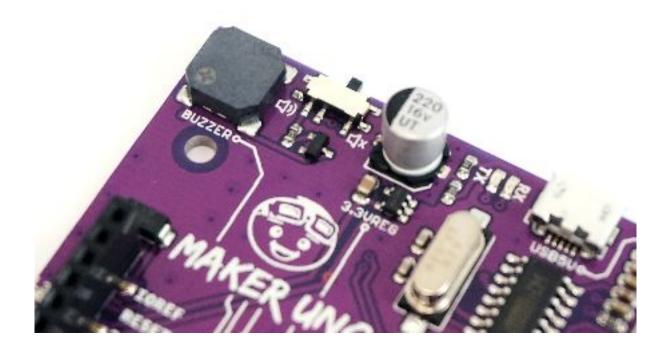

#### 8. WARRANTY

- Product warranty is valid for 6 months.
- Warranty only applies to manufacturing defect.
- Damaged caused by misuse is not covered under warranty.
- Warranty does not cover freight cost for both ways.

Prepared by: Cytron Technologies Sdn Bhd www.cytron.io

No. 1, Lorong Industri Impian 1, Taman Industri Impian, 14000 Bukit Mertajam, Penang, Malaysia.

> *Tel:* +604 - 548 0668 *Fax:* +604 - 548 0669

> > Email: support@cytron.io sales@cytron.io

Created by Cytron Technologies Sdn Bhd - All Rights Reserved