


# BLUSTER


## Assembly Guide

Built with Top brands  
( EasyMech, SmartElex, Orange )


**Attention :** Please remove the protective film before assembling

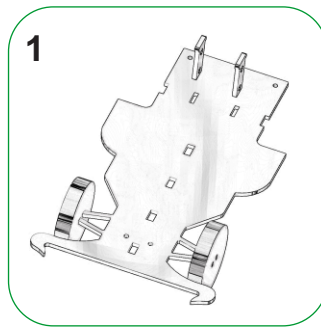


Take out motor clamps from the bag with label "Threaded" and mount it as shown in the fig.

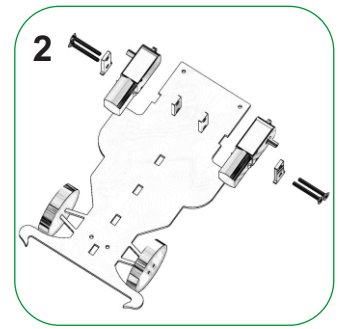


Fix the BO motors to the baseplate with the help of the motor clamps and screws as shown in fig. Take out Motor clamps & screws from the bag label "for motor".

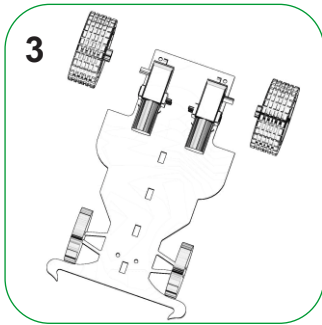


Now attach the yellow BO wheels to the motors

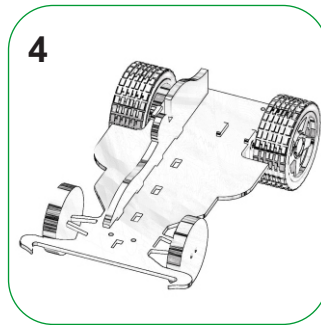


Snap the front spoiler to the baseplate as shown in the fig.

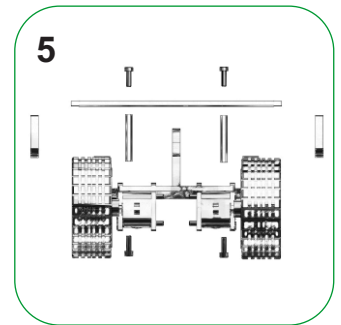


Fix the rear spoiler to the baseplate with the help of brass standoff. Take out standoff and screws from the bag label "For Spoiler"

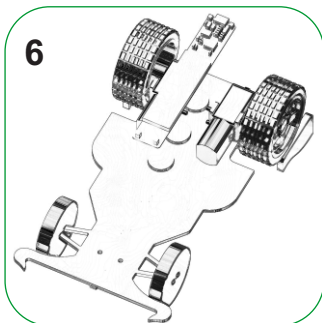

Place the SmartElex 1S 18650 Li-ion charger on the baseplate by using 3M DST pads as shown in the fig.

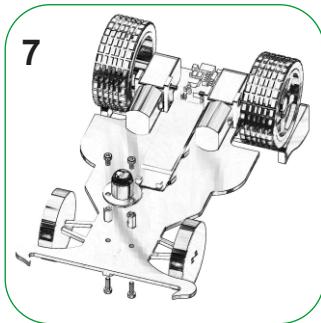

Mount the small castor wheel below the front spoiler. Take out standoff and screws from the bag label "for castor"

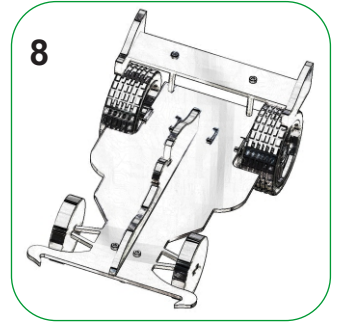

Finally make the connections of the motors, Li-ion charger to the remote & place the Li-ion cell and drive the car with the remote

## Connection Diagram

